PREMIER®

MANUAL DE INSTRUCCIONES
GAMMA TABLET V1.8
TAB-4950-8G

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

INSTRUCCIONES DE SEGURIDAD 2
DESCRIPCIÓN 2
CONFIGURACIÓN USUAL 6
RESOLUCIÓN DE PROBLEMAS 8
ESPECIFICACIONES 8

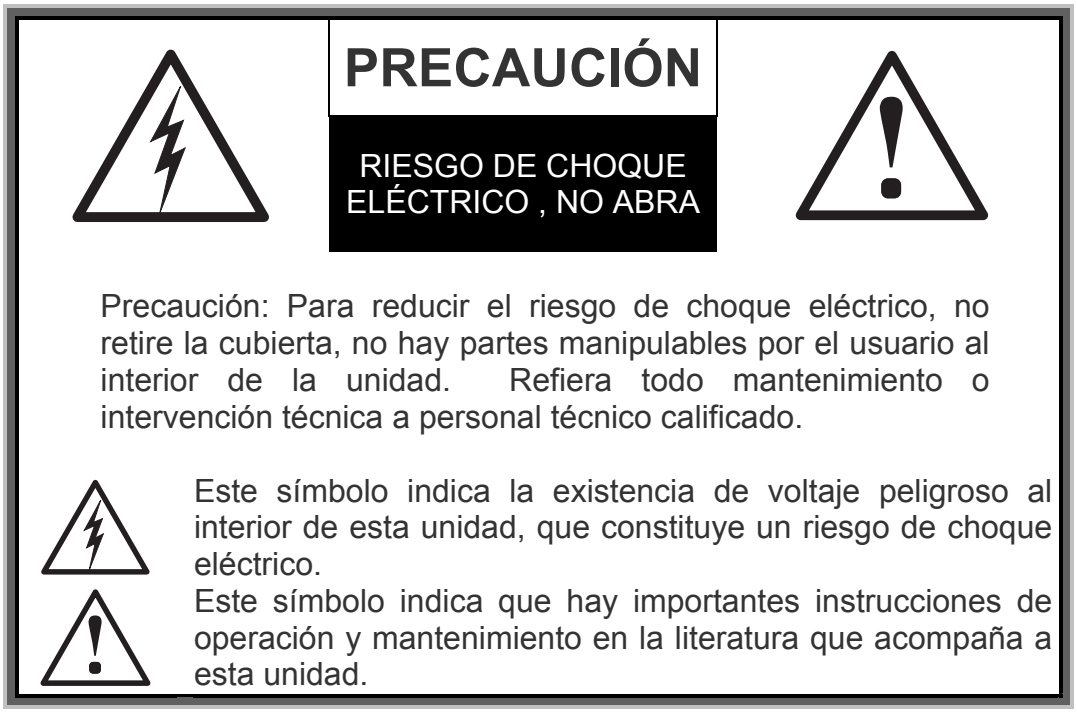
PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

INSTRUCCIONES DE SEGURIDAD

- La tableta cuenta con tecnología táctil en la pantalla por lo cual usted puede manipularla con los dedos o con el esfero de plástico. (No utilice otros objetos puntiagudos para manipular la pantalla).
- No exponga la tableta altas temperaturas, humedad o polvo.
- Evite que la tableta se caiga al suelo o se golpee.
- Utilice un nivel de volumen adecuado.
- Cargue la tableta cuando la unidad lo indique u observe síntomas de poca energía.
- No utilice un cargador diferente al de la unidad para evitar daños.
- En el proceso de carga de la batería es probable que la tableta se caliente un poco. Esto es un fenómeno normal y no afectará su uso.
- No desconecte la tableta cuando la este formateando o esté de descargando archivos para evitar que los archivos se dañen.
- No utilice la tableta en lugares donde este tipo de dispositivos electrónicos no se deban utilizar.
- No utilice la tableta mientras conduce o camina para evitar accidentes.
- El puerto USB es para transferencia de datos, no para carga.
- Recuerde que los virus informáticos también pueden entrar en la tableta. Tome las precauciones adecuadas y mantenga el antivirus de computador al día.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

DESCRIPCIÓN

1. Carcasa plástica
2. Pantalla táctil
3. Cámara
4. Volumen
5. Reiniciar
6. Encender/Apagar
7. Luz indicadora de carga
8. Micrófono
9. Conector DC
10. Conector HDMI
11. Puerto USB
12. Conector de audífonos
13. Ranura de micro tarjeta SD/TF
14. Carcasa plástica (lado posterior)
15. Parlante izquierdo
16. Cámara posterior (espejo)
17. Cámara posterior (superposición)
18. Parlante derecho

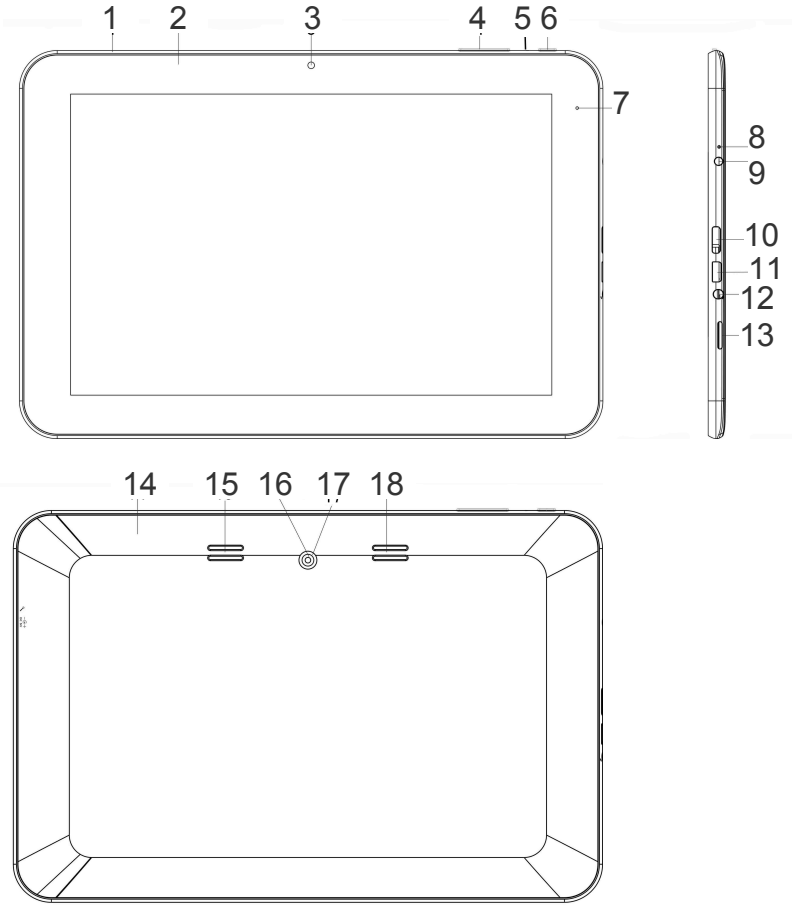

INSTRUCCIONES DE OPERACIÓN

CARGAR LA TABLETA

Antes de utilizar la tableta por vez primera, cárguela por 10 horas. Después de eso puede recargar la tableta normalmente. Conecte el cargador en la unidad y el tomacorriente.

Nota

- Utilice únicamente el cargador recomendado para este producto.
- Es normal que la superficie de la tableta se caliente un poco cuando la esté cargando o cuando haya utilizado la tableta por un período prolongado.
- Si no va a utilizar la tableta por un período largo, cárguela al menos una vez al mes.

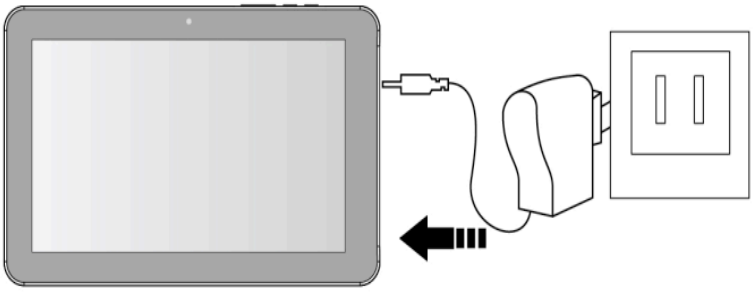

CONEXIÓN AL COMPUTADOR

Conecte la tableta al computador por medio de un cable USB para transferir datos de un lugar a otro. Al conectar ambos dispositivos la tableta cambiará a modo USB para que pueda hacer la transferencia de archivos.

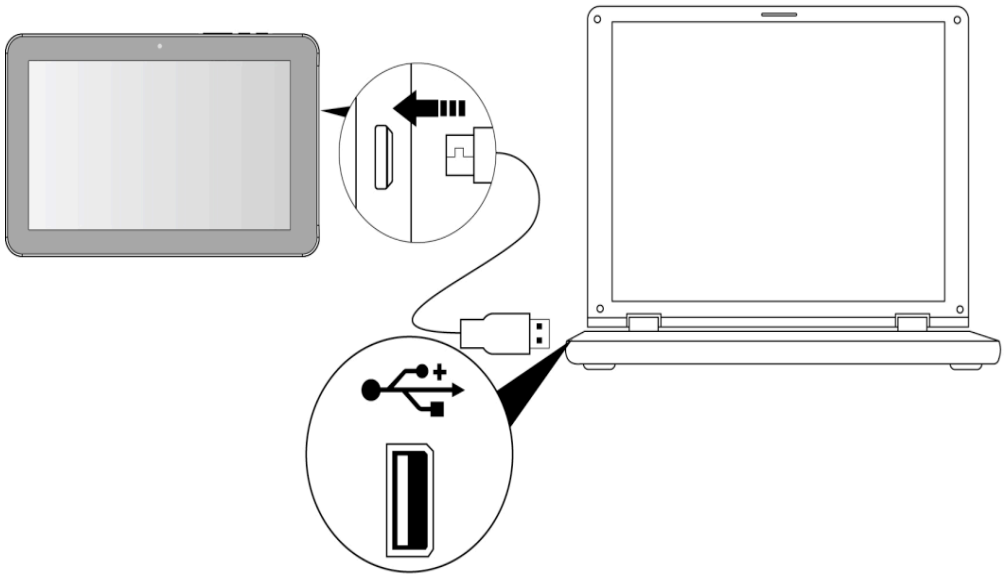

OTROS DISPOSITIVOS USB

Conecte un disco U, un teclado, un mouse, etc. a través del puerto USB para operar la tableta. Tenga en cuenta no desconectar el cable USB hasta que los archivos que se estén transfiriendo no hayan pasado completamente.

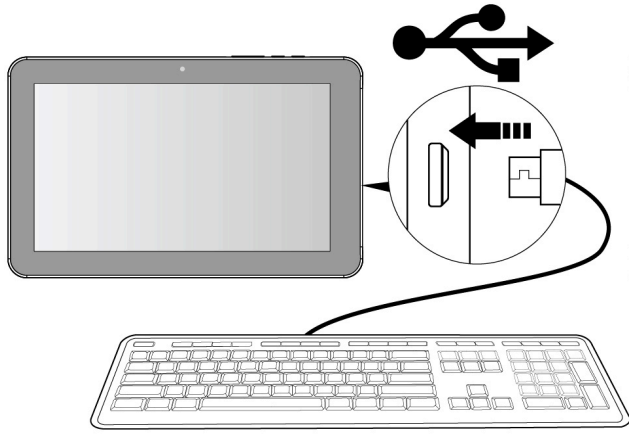

MICRO TARJETA SD/TF

Usted puede colocar una tarjeta de este tipo para expandir la capacidad de almacenamiento de la tableta. La unidad debe estar apagada antes de colocar la tarjeta. Coloque la tarjeta como se muestra en la imagen asegurándose de que quede bien puesta. Cuando necesite retirarla, asegúrese de que la tarjeta no está obteniendo datos de la tarjeta.

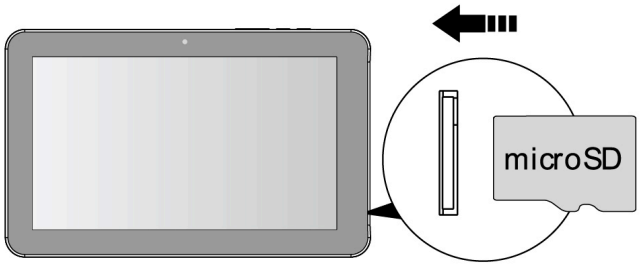

CONECTAR AL TELEVISOR POR MEDIO DEL CONECTOR HDMI

Conecte un cable HDMI para unir la tableta con el televisor. De esta manera la imagen de la tableta se proyectará en el televisor.

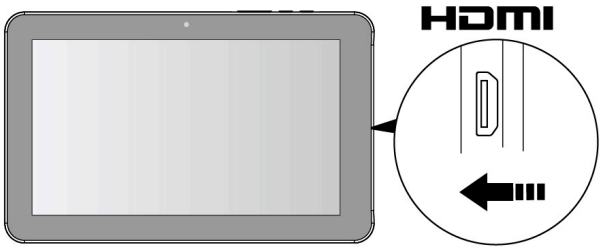

REINICIAR

Si el dispositivo falla y no puede utilizar ninguna función, debe reiniciarlo. Presione el botón de reiniciar por algunos segundos.

CONEXIÓN A LA RED

Entre a la interface de conexión Wi-Fi. La tableta buscará automáticamente las redes de Internet cercanas disponibles.

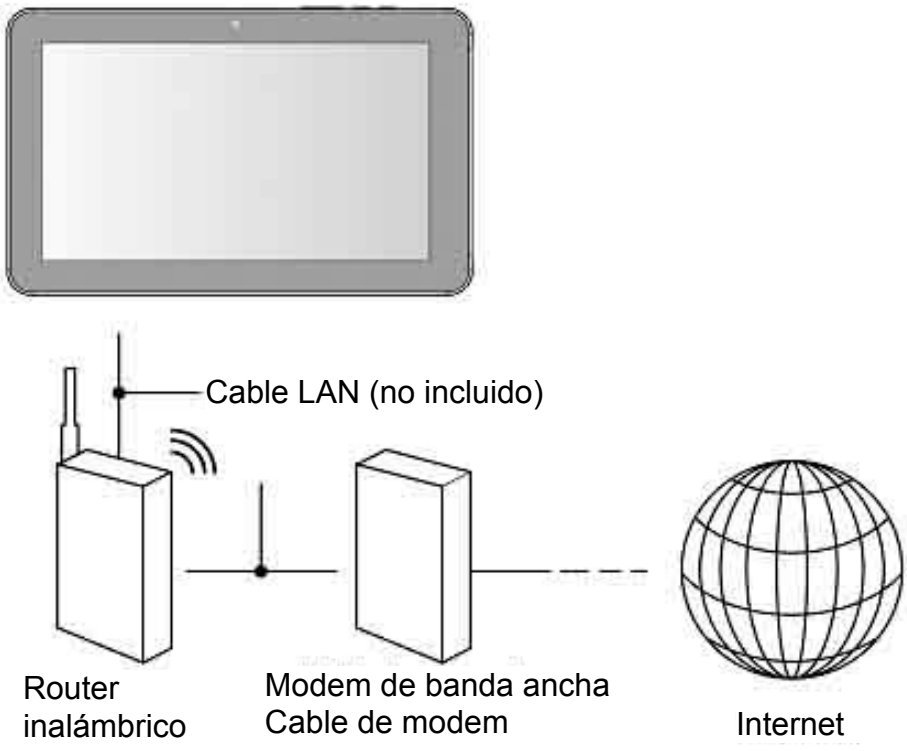

CONFIGURACIÓN USUAL

Presione el ícono de configuración para entrar a esta función.

WI-FI: Haga clic para activar o desactivar esta función. Al activarla, la unidad buscará las redes cercanas disponibles. Debe introducir una contraseña si la red lo requiere.

CONEXIÓN MÓVIL: Si la tableta está conectada a través de 3G o Cable de Red RJ45, entre a la función de Conexión Móvil para utilizar la unidad como router para conectarse a internet.

RED MÓVIL: Conecte un cable USB 3G. Al conectarse de esta manera, el dispositivo se conectará a una red 3G automáticamente. Se mostrará en pantalla el tipo de conexión. (Se debe apagar la conexión Wi-Fi antes de conectarse de este modo).

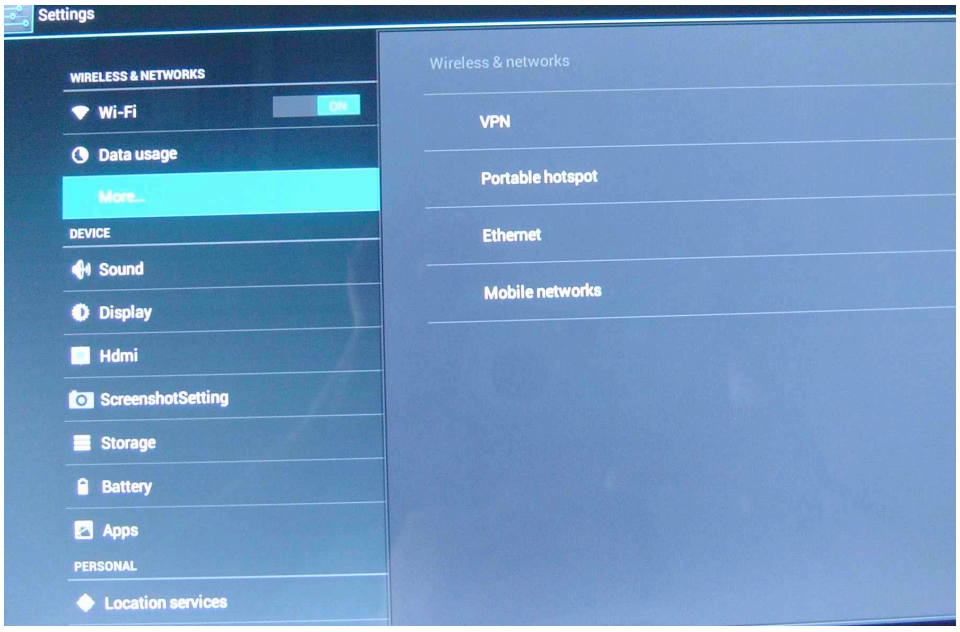

IMAGEN

Puede activar o desactivar la función de rotar la imagen en pantalla automáticamente.

IDIOMA Y ENTRADA

Puede elegir el idioma de la unidad al igual que el modo de entrada para el teclado.

FECHA Y HORA

Cuando se conecte a internet, la tableta puede tomar la hora y fecha exacta de la red.

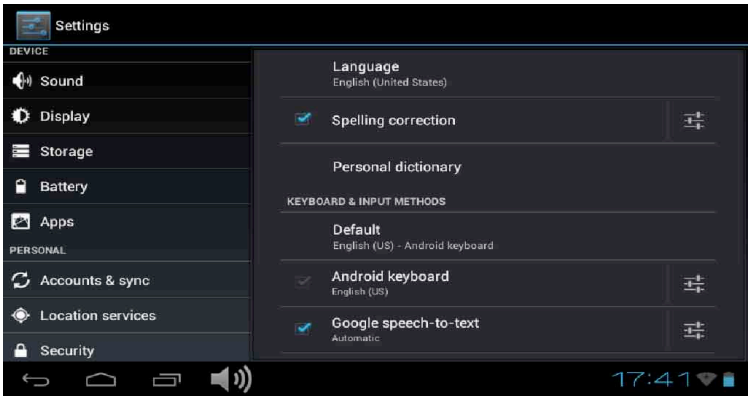

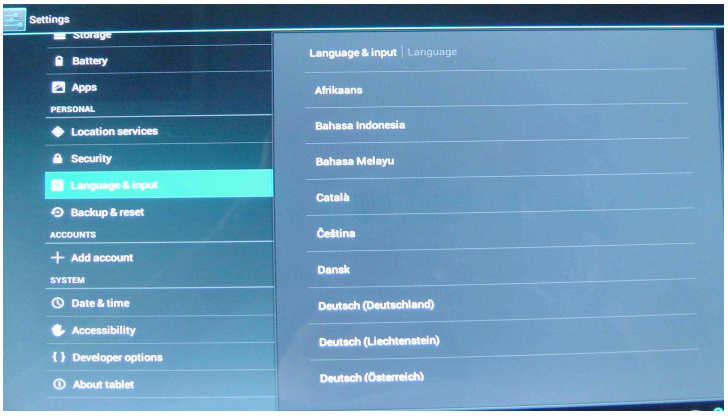

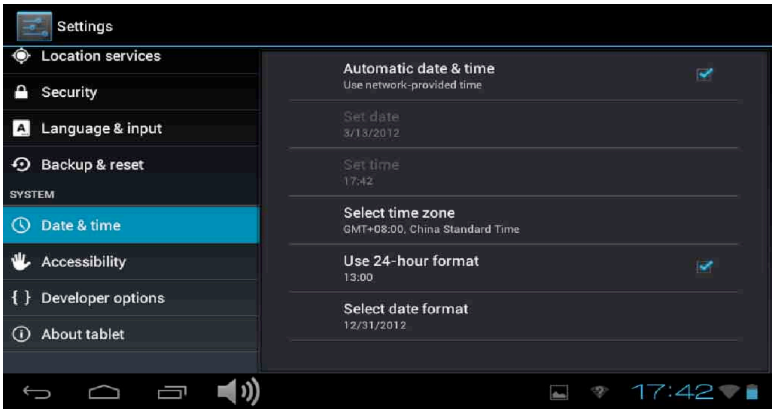

RESOLUCIÓN DE PROBLEMAS

Esta lista es para ayudarle a resolver problemas simples que pueden presentarse en el uso del producto. Por favor léala y verifique estos puntos antes de solicitar ayuda de personal de servicio técnico autorizado.

PROBLEMA	CAUSA Y SOLUCIÓN
La unidad no enciende	• Verifique la conexión del cable de poder y que la batería esté cargando
Se escuchan ruidos por los parlantes	• Los archivos de música pueden estar dañados
No se pueden descargar o copiar archivos	• Verifique la conexión del cable entre la tableta y el computador; verifique la memoria disponible de la tableta
La conexión USB falla	• Verifique el Estado del cable USB
La tableta no se puede conectar a un dispositivo LAN inalámbrico	• Verifique que el dispositivo LAN esté encendido; verifique que no haya obstáculos entre la tableta y el dispositivo; puede haber otros dispositivos encendidos con la misma frecuencia de banda y pueden interferir con la señal.

ESPECIFICACIONES

Sistema Operativo	Google Android™ 4.1
CPU	Cortex-A9 1.5GHz
Sistema RAM	1GB DDRIII
Memoria	8GB NAND Flash
Pantalla táctil	Capacidad de 5 puntos
LCD	10.1” 1280x800, TFT LCD IPS
Wi-Fi	802.11 b/g/n
Cámara	0.3/2.0 Mega Pixeles
Eternet LAN	Si (Cable USB)
3G	Cable USB 3G
Gravedad	Sensor de gravedad 3G
Temperatura de Funcionamiento	0-45ºC
Voltaje	AC110-240V 50/60HZ / DC IN: 5V/2.5A
Salida HDMI	Mini HDMI con soporte para 1080p
Formatos de Música	MP3,WMA,OGG,APE,FLAC,AAC,WAV, etc.
Formatos de Video	RM,RMVB,MPEG,MKV,AVI,FLV,VP8 hasta 2160
Formatos de Imagen	JPEG,BMP,GIF,PNG etc.

- Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.
- El robot Android™ se reproduce ó modifica a partir del trabajo creado y compartido por Google y es usado de acuerdo a los términos descritos en la licencia de reconocimiento 3.0 de bienes comunes creativos.
- Android™ es una Marca Registrada de Google Inc.

PREMIER®

INSTRUCTION MANUAL
GAMMA TABLET V1.8
TAB-4950-8G

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

Key points :

This manual includes security measures and correct operating methods. For personal safety, please make sure to read this manual before using. Thank you!

- The machine adopts capacitive touch screen, you can just touch it by finger or click with capacitive pen for operation.
  (Never use the sharp objects to click the screen, or the touch screen may be damaged).
- Do not put the device at any high temperature, high humidity or dusty place.
- Do not drop or crash the device to prevent the violent impacting between the display and the capacitive touch screen. Or the customers have to take the consequence by themselves.
- Please choose the suitable volume and never make the too loud volume .If you feel uncomfortable please turn down the volume or stop to use the device soon.
- Please charge if you meet those situations as below:

A、Low battery on the battery icon. B、The system turns off automatically.
C、The keys do not work. D、" " is battery charging.

【Note】:Don't use the different type charger or it may make the device burned . We assume no liability for the damage.
Please contact with our agent if you need the original adaptor.

- In the charging process,the device may be warning up a little (not too hot), this is normal phenomenon, it wont effect the use.
- Do not disconnect the device while formatting, downloading or uploading, or it may make the error.
- Our company won't bear the duty for the loss of the memory erasing on account of the damage, repair or some other reason.
  Please operate the device according to the user manual rightly and backup the important data in time.
- Do not dismantle this device by yourself, and do not polish it with alcohol, dilution, or benzene.
- Do not use this device where electronics is forbidden, such as on the airplane.
- Do not use this device while walking and driving, avoiding traffic accident.
- USB is for transferring data . can not for charging, can not use 2 USB in same time.
- Virus can damage this device. So please use proper computer antivirus and keep it updated.
- For any support needed for this device please contact the company or the authorized distributor. Any unauthorized dismantling of the device will make the warranty null and void.

We reserve the right to keep the change of the products, the specification and design is subject to change without notice!

Device Description

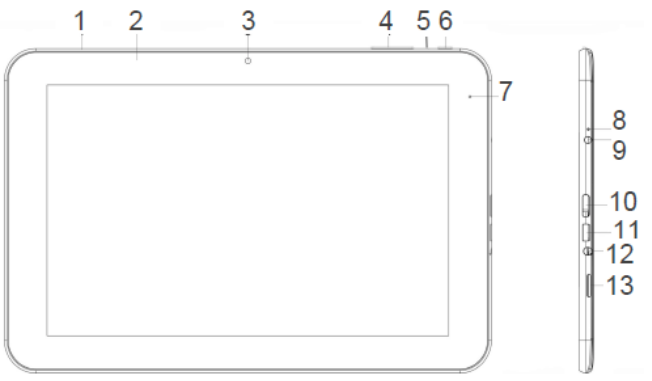

1.Plastic case
2.Touch screen□You can click and drag in the touch screen.
3.Camera□You can take photos and videos etc
4. Volume +/- □Turn up / down the volume. 5. RESET : Reset the device
6. **POWER** :
• Turn on/off the device by long pressing this button
Turn on：long press the " Power" key, unit will enter to main menu after

display OSD.（Be patient power on will take some time）

Turn off: Long press " Power" key 3 seconds, the system will show " turn off" option. Click" turn off" , the player will shart down, press the return key to stay.

• short press "power" key, will option for open/turn off the screen.

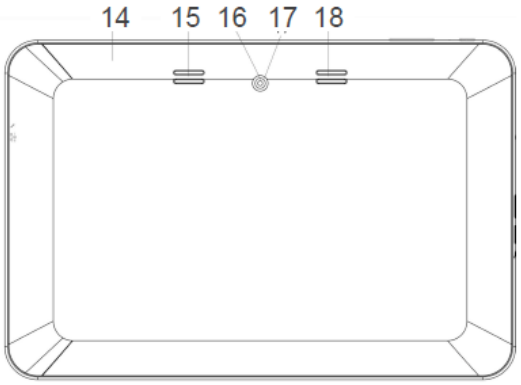

7. Charing light: it will show Red color on charging, it will shut down when charge full.
8. MIC: Microphone
9. DC jack: connect the power cable to charge to the device
10. HDMI: HDMI output.
11 USB socket: Connect computer/Udisk/keyboard/mouse/3G Dongle
12 : Earphone jack: 3.5mm standard earphone jack。
13. Micro SD/TF□Micro SD/TFcard slot。
14. Plastic case: rear side.
15. Speaker: Putting sound (left side)
16. Rear Camera: Mirror
17. Rear Camera: camera overlay
18: Speaker: Putting sound (right side)

【TIPS】：1. When the battery is low, it will power off automatically。

2. If you shut down illegally, device would scan and repair the disk, when you restart, the screen will stay at the progress bar for a long time.。

3. Definition of " Press".

-- short press: press the button less than 2 seconds ； -- Long press: Press the button more than 3 seconds.

If there is no special explain, " Press" means short press。

Setting up for the first time

◆Charging your device

For first time use, you need to charge the device for ten hours。

After that you can recharge the device as needed. Connect the DC in jack to your device and plug the AC adapter into any AC outlet

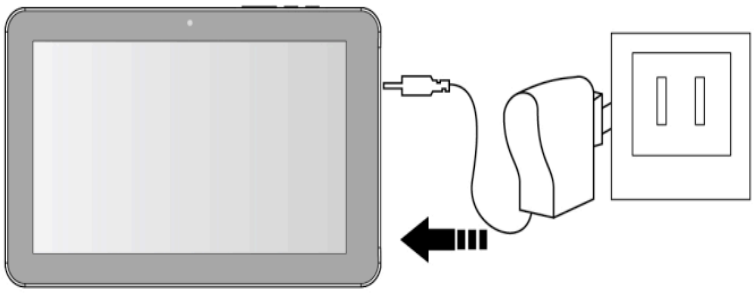

【TIPS】

1. This device adopts built-in polymer battery, only the specified charger should be use ；
2. It is normal for the device's surface to become warm during charging or long periods of use, all

devices are factory tested before release
3. If you do not use this set for a long time, please charge/release it once One month to avoid deep discharge,
The damage caused by battery over-consuming is not included in the warranty

◆Connecting to a PC:

• You can connect with PC by USB cable attached with the device, you can transfer your personal data to the PC.
• Connect the PC and the device, it will change to the USB mode□in this state, realize the files transfer function between the PC and device□

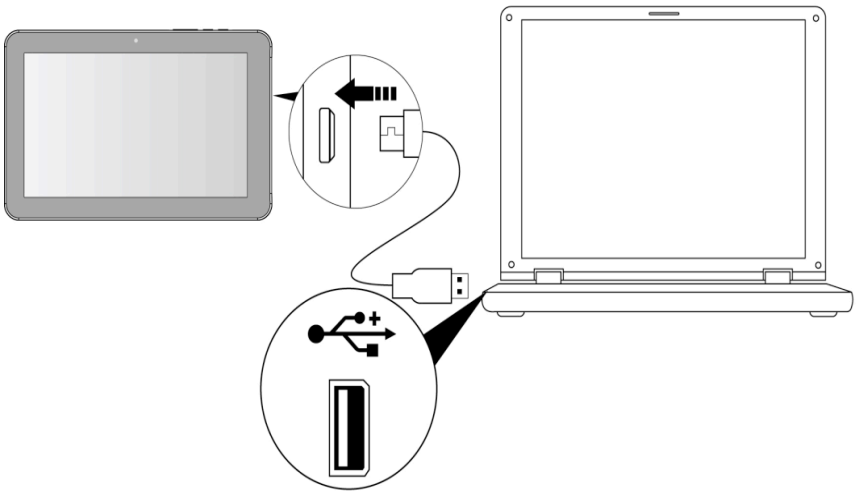

◆Inserting the micro SD card:(1 USB socket):

1. Connet U disk, Keyboard, Mouse, Dongle etc；
2. By built in application, such as file browser, could check all file
in outlay of USB。

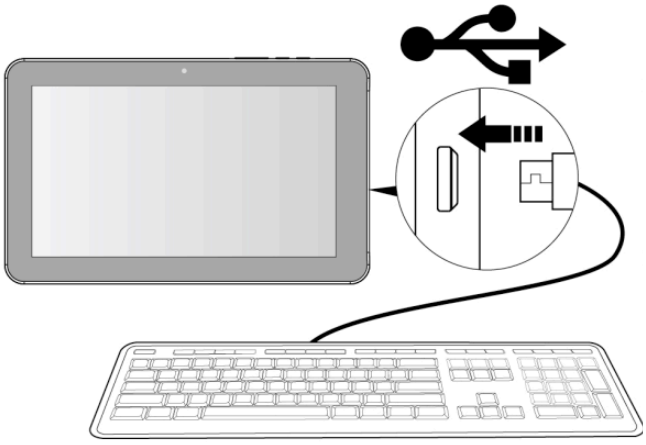

【TIPS】:

1. Before removing this U disk, make sure the device is not accessing data on the disk
2. Can not use 2 USB in same time。

◆ **Micro SD/TF:**

User can insert Micro SD/TF card to expand device storage space：

1. Turn off the device by pressing and holding the power button；
2. Insert the micro SD card as shown..

【TIPS】:

1. Ensure that the micro SD card is inserted all the way into the card slot.。.

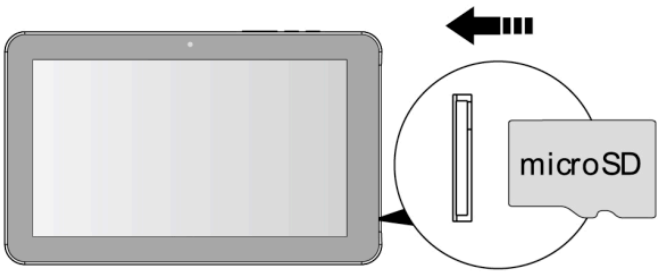

2. Befor removing this card, make sure your device is not accessing data on the card。

◆Connecting to ta television with HDMI :

1. Connect a micro HDMI cable to your device then plug the other end of the HDMI connector into a TV or monitor with a HDMI port。

【Tips】: Could click or cancel HDMI if it is auto connection.

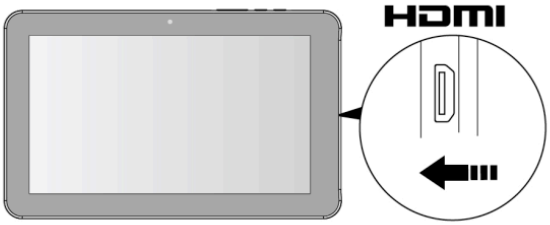

◆Reset:

1. Please reset the device, if no any response when touch the screen or press key
2. Please touch the “ reset key” by some slim long item.

◆ Connecting to the newtwork:

Wi-Fi wireless setup:
Enter the setting interface, and turn on the Wi-Fi item.
The device will automatically search any accessible nearby wireless networks。

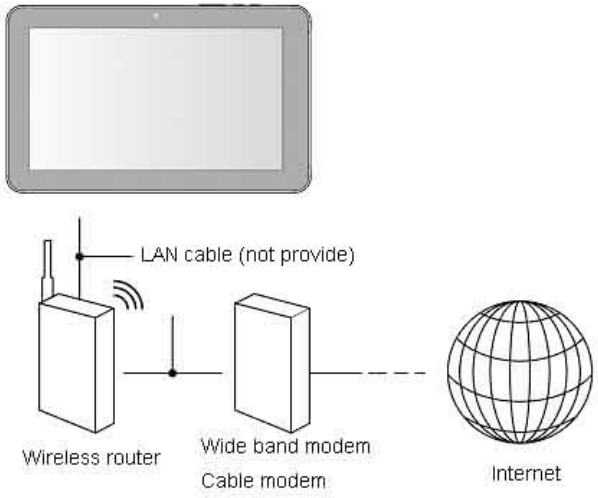

Commonly used settings

Press the setup icon to enter the setting..

◆ **Wi-Fi**: Click ON or OFF to open or close Wi-Fi.

When open Wi-Fi,the system will scan the wifi signal around automatically.Meanwhile, users could add network by themselves,Enter password if there has in the WiFi system

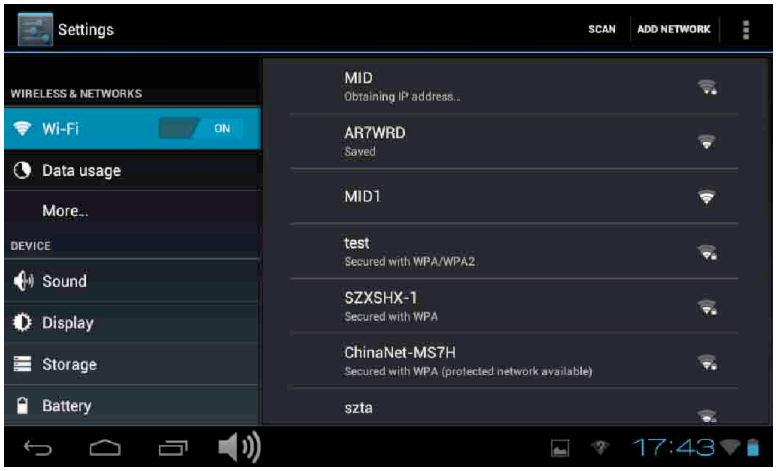

More…:

1. **Mobile hotspot**: if device connect internet via 3G or Cable Network(RJ45 Dongle), then enter the " setting" menu, open " Mobil hostpot", then this device can use as WIFI wireless router to connect internet.

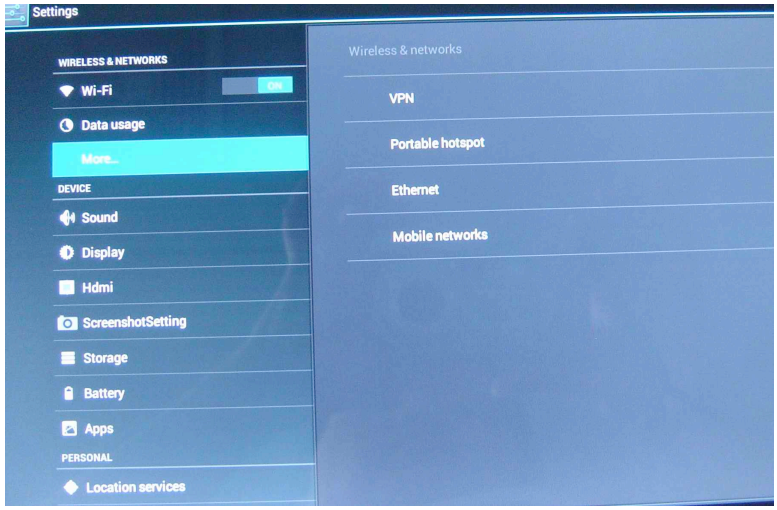

【Tips】:

(1). When open " Mobil hotspot", the WIFI connection will close automatically.

(2) **When open " Mobil hotspot", the Power Consumption will very big.**

2. **Mobil Network**:

Connet USB 3G Dongle：Insert 3G SIM card to USB 3GDongle，then connect Dongle to device，the device will conncet 3G network automatically, once connec successfully, there will show the 3G icon. (3G SIM should match with USB 3G Dongle)

【Tips】：Need to turn off " WIFI" network before connect USB 3G Dongle。

Display:

Rotate screen setting: Enter setting menu: Display -> Auto-rotate screen, you can open/close the screen autorotation function.

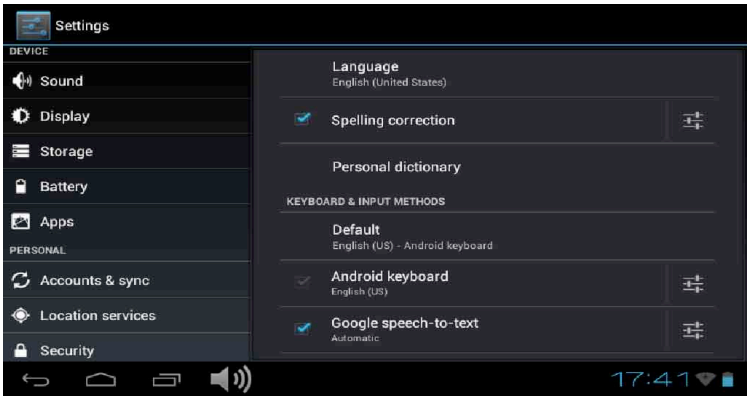

Language & Input:

1. Language: Users can choose OSD languages.
2. Keybard & Input methods: Select language method.

【Remark】: In this state, users can switch the input method

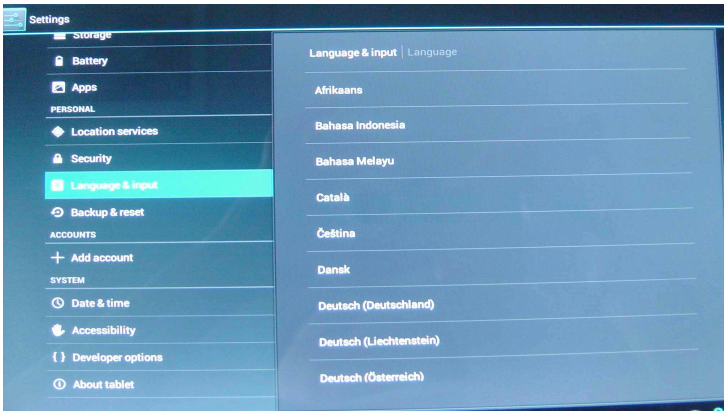

◆ **Date & Time**: when the internet is connected, turn on
" Automatic date & Time", the device can obtain the real
date and time from the internet.。

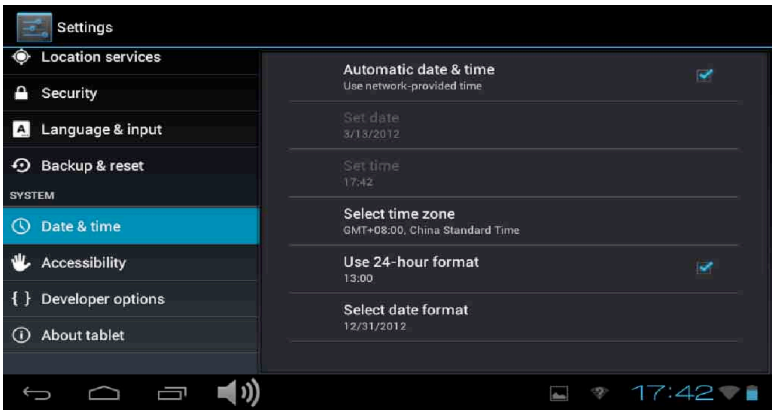

Troubleshooting

• **Can not power on:**
--Connect the power cable to charge to the device, after a while and then check again.
-- If still can not open, please contact with our service centre.

• **Serious noised:**
-- Check if the music file is damaged ; .
-- If the music files are damaged, it may cause serious noise and jumping sound
。 .

• **Can not download or copy:**
--Check if it is connecting correctly between the device and PC ; .
-- Check the spare space of the memory ; .
-- Check the USB cable ; .

• **USB connect is fail:**
-- Make sure that the USB device is securely connected to the USB jack ;
-- Check if the USB device or a cable is damaged ;
-- If the USB devic is connected via a USB hub, connect the USB device directly to the device.

• **Cannot connect the device to the wireless LAN router**
-- Check if the wireless LAN router is on..
-- Depending on the surrounding environment, such as the wall material, radio wave receiving condition , or obstacles between the device and the wireless Lan router, the communication distance may be shortened, move the device and the woreless Lan router closer to each other ;
-- Devices that use a 2.4GHzfrequency band, such as a microwave, Bluetooth, or digital cordless device, may interrupt the communication,move the device away from such devices, or turn off such devices

SPECIFICATION

OS	Google Android™ 4.1
CPU	Cortex-A9 1.5GHz
System RAM	1GB DDRIII
Memory	8GB NAND Flash
Touch Panel	5 point capacitive Screen
LCD	10.1" 1280X800,TFT LCD IPS screen
WIFI	802.11 b/g/n
Camera	0.3/2.0 Mega pixel
Ethernet LAN	Yes（USB dongle）
3G	3G USB dongle
Gravity	3D gravity sensor
Voltage	AC110-240V,50/60Hz. / DC IN : 5V/2.5A
Battery work temperature	0 – 45ºC
HDMI output	Mini HDMI support 1080p output
Music format	MP3,WMA,OGG,APE,FLAC,AAC,WAV etc
Video format	RM,RMVB,MPEG,MKV,AVI,FLV,VP8 up to 2160 support
Picture format	JPEG, BMP, GIF,PNG etc.